

UNI-COM

 
Security timer

Model: 63346

Operating instructions

Directions for use

Plug the timer into the mains socket and switch on. The green LED on the front of the timer will flash three times, after each flash you will hear the clicking of the relay. Insert your appliance into the timer and ensure it is also switched on.



Use the switch on the back of the timer to select:

Summer (S) - shorter initial lighting cycle (because it gets dark later in the evening)

Winter (W) - longer initial lighting cycle (because it gets dark earlier in the evening)

A built-in dusk to dawn sensor means the appliance will automatically turn on when it becomes dark. It will initially turn on for approximately 4 hours (winter setting) or approximately 2 hours (summer setting). Following this the appliance will automatically select at random one of the following three settings:

- (1) Turn on one to three times randomly during the night for approximately 1 hour.
- (2) Turn on every hour during the night for approximately 30 minutes.
- (3) Turn on every hour during the night for approximately 15 minutes.

Important

- There is a 10 minute delay between the timer detecting the dark and then turning on (this is to prevent the timer activating accidentally during hours of daylight when someone for example walks/stands in front of it).
- Do not plug in an appliance where the load exceeds 5 Amp / 1100W.
- Ensure the timer is in a position that receives optimum daylight, do not locate behind any household furniture as this will prevent the dusk to dawn sensor working correctly.
- If the appliance being used is a light ensure it is not pointing towards the dusk to dawn sensor on the front of the timer.
- The timer may not turn off immediately in the morning, after detecting light it will complete its current setting before turning off.

Specification
230V AC 50Hz

Safety warning

This product is not a toy. Do not plug in with multi plug adaptors / extensions leads. Do not use with immersion heaters, over 500W filament or discharge type lighting. Not suitable for commercial use. For indoor use only (operating temp: 0°C to 40°C). Do not plug in an appliance where the load exceeds 5 Amp. Always ensure the plug of any appliance is fully inserted into the timer. If cleaning of the timer is required, remove from the mains power and wipe timer with a dry cloth. Do not immerse in water or any other liquid. Do not connect the timer to a device performing a mechanical function.

Failure to follow these safety instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship.

It does not cover physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.



Uni-Com

Long Reach, Galleon Boulevard, Crossways Business Park,
Dartford, Kent, DA2 6QE, United Kingdom

Email: info@uni-com.co.uk
Web: www.uni-com.co.uk