

UNI-COM

 
Remote control sockets

Model: 63810

Operating instructions

Directions for use

Important before use - open the battery cover on the back of the remote control and remove the battery tab.

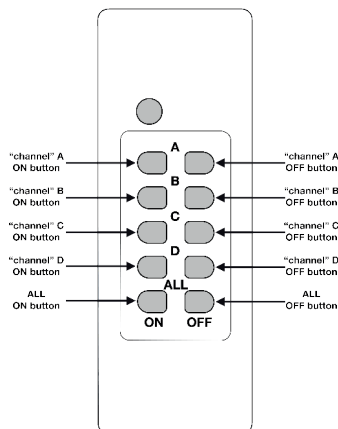

- (1) Plug a socket into the mains socket and switch on - the red LED will flash on the front of the socket.
- (2) Press the A ON button on the remote control - you will hear the relay in the socket click and the red LED will stop flashing. The socket will be paired to channel A on the remote control.
- (3) Press the A OFF button on the remote control - the red LED will turn off.
- (4) Plug your appliance into the front of the socket and you can now use the remote control A buttons to turn the appliance on and off.
- (5) Repeat the above process to set up multiple sockets on channel A or each socket on a different channel by pressing B, C or D instead of A when following the above instructions.
- (6) All sockets can also be turned on and off simultaneously using the ALL ON and ALL OFF buttons on the remote control.

Resetting the socket so it can be paired on a different channel

- (1) Turn the power off and on at the mains socket.
- (2) Press and hold the ALL OFF button on the remote control - the red LED on the front of the socket will flash quickly. Keep holding the button until the red LED turns off.
- (3) The socket has been reset.


N.B. In the event of a power cut the red LED on the front of the sockets will flash when the power is restored.

Do not touch any buttons on the remote control until the red LED stops flashing, this will retain your existing pairings you have previously set up.

Battery replacement - remote control

When the red LED on the front of the remote control does not light when you press one of the buttons the batteries will need replacing.

- (1) On the back of the remote control slide the battery cover down and lift to open.
- (2) Insert 2 x AAA batteries, observing the polarity markings.
- (3) Refit the battery cover.

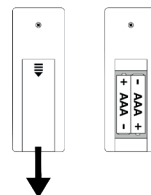

Instructions continue overleaf - please turn over

Specification
230V AC 50Hz
Max load: 13A

Hereby, Uni-Com (Global) Ltd declares that the radio equipment type door chime is in compliance with the Radio Equipment Regulations 2017 (SI 2017/1206). The full text of the UKCA Declaration of Conformity is available to view at www.uni-com.co.uk.

Safety warning

Keep out of reach of children. For indoor use only (operating temp: 0°C to 40°C). Do not plug in an appliance where the load exceeds 13 Amp. Always ensure the plug of any appliance is fully inserted into the socket. If cleaning the socket is required, remove from the mains power and wipe unit with a dry cloth. Do not immerse in water or any other liquid. do not use if the casing of the socket becomes cracked or damaged. Remove batteries if the product is not going to be used for an extended period. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries must be removed immediately. Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

 
Batteries



This product uses 2 x AAA batteries. They must be removed prior to disposal.
Help the environment by disposing of your product and batteries responsibly.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.

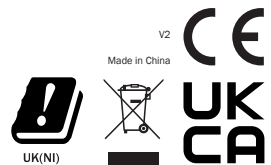

Uni-Com

Long Reach, Galleon Boulevard, Crossways Business Park,
Dartford, Kent, DA2 6QE, United Kingdom

Email: info@uni-com.co.uk
Web: www.uni-com.co.uk