
## **PRODUCT FEATURES**

## Bell push

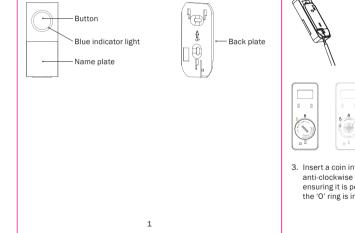

# **BATTERY INSTALLATION**

#### Bell push



- 1. Insert a flathead screwdriver under the tab on the bottom of the bell push to lift it slightly.
- 2. Hold the back plate still and slide the bell push upwards to separate



3. Insert a coin into the slot on the battery cover and turn anti-clockwise to remove. Insert 1 x CR2032 button cell battery. ensuring it is positive (+) side up. Refit the battery cover, ensuring the 'O' ring is in position.

## PAIRING

A wireless + bell push will work with all wireless + door chimes. A maximum of 8 bell pushes can be paired to the same chime unit. To add an extra bell push repeat the pairing procedure with the new bell push.

## INSTALLATION

Test the bell push in its intended locations before you fix it in place.

The operating range will be reduced if the bell push is mounted on metal or double uPVC door frames. Electrical/wi-fi equipment and the number of walls between the bell push and the chime unit will also reduce the operating range.

3

1. Adhesive pad

2. Screws





