 
 


## PRODUCT FEATURES

### Chime unit

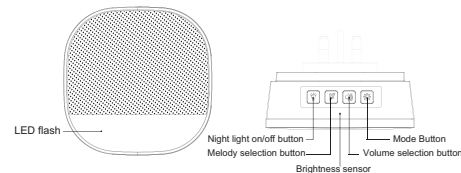

### Bell push

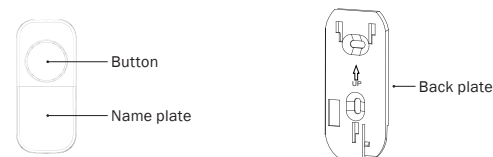

1

## QUICK SET UP GUIDE

### Pairing



Insert the chime unit into the socket and switch the power on. You will hear a "Ding Dong". Within 120 seconds press the button on the bell push. The chime will sound and the pairing is complete.

### Chime selection



2

## QUICK SET UP GUIDE cont.

### Volume control



Press the volume button to cycle through the 4 options (in descending volume). Stop when you hear the one you want.

### Operating mode selection



1. Chime sound only
2. Flashing blue LED chime alert light only
3. Both together
4. Short press the night light on/off button. Turn on or off the night light. When the night light switch button is on, the night light is on at night and the night light is automatically turned off during the day. When the night light switch key is off, thenight light is not on during the day and night. Note The brightness sensor must not be blocked.

3

 
## INSTALLATION

Test the units in their intended locations before you fix them in place.


The operating range will be reduced if the bell push is mounted on metal or double uPVC door frames. Electrical/wi-fi equipment and the number of walls between the bell push and the chime unit will also reduce the operating range.

### Bell push

1. Adhesive pad




 2. Screws

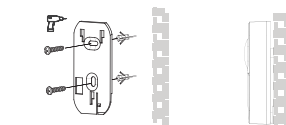

4

## SPECIFICATION

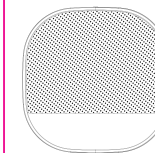 

Power input: 230V AC 50Hz  
Type R2 device



Power supply: Kinetic bell push - self powered when the button is pressed.  
No battery required

Frequency: 433.92MHz  
Operating temp: -5°C to 55°C  
Standby power consumption: <5µA



Hereby Uni-Com declares that the radio equipment type door chime is in compliance with Radio Equipment Regulations 2017 (SI 2017/1206) and Directive 2014/53/EU. The full text of the UKCA Declaration of Conformity is available to view at [www.uni-com.co.uk](http://www.uni-com.co.uk)

5

## TROUBLESHOOTING

### Chime sounds when nobody is pressing the bell push

Your chime unit may be picking up outside interference from other wireless transmitters.



Clear the chime unit memory by pressing and holding the chime selection button for 20 seconds until a "Ding Dong" sound is heard. Repeat the pairing procedure.

6

## SAFETY WARNING

Chime unit is for indoor use only. The bell push is weather resistant, do not submerge. If cleaning of the chime unit is required, remove from the mains power and wipe unit with a dry cloth. Do not use if casing of the chime unit becomes cracked or damaged. Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

### Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover physical damage to the units. Proof of purchase required. This does not affect your statutory rights.

8



7

UNI-COM

## Battery free door chime

Model: 68617

## Operating Instructions

### Uni-Com

Long Reach, Galleon Boulevard,  
Crossways Business Park,  
Dartford, Kent, DA2 6QE,  
United Kingdom

Email: [info@uni-com.co.uk](mailto:info@uni-com.co.uk)  
Web: [www.uni-com.co.uk](http://www.uni-com.co.uk)

### Authorised Representative

Tucks O'Brien, 24 Magna Drive,  
Magna Business Park,  
Citywest Road, Dublin 24,  
D24 FNYO, Ireland

©2024 Uni-Com. All rights reserved.

V1

9