

MOTION SENSOR LIGHT

Model: 68372

Operating instructions

Battery installation and replacement

1. Slide the back plate down to remove
2. Insert 3 x AAA batteries, observing the polarity markings
3. Refit the back plate

NB. When the batteries are installed the light will momentarily turn on for 2 seconds

Directions for use

NB. Test the light in its intended location before you fix in place

1. The light will automatically illuminate when movement is detected up to 3 metres away in the dark
2. The light will automatically turn off 30 seconds after last movement is detected

Safety warning

Keep out of reach of children. Remove the batteries if the light is not going to be used for an extended period. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries should be removed immediately. For indoor use only. Failure to follow these safety instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.

Batteries



This product uses 3 x AAA batteries.
They should be removed prior to disposal.

Uni-Com

Long Reach, Galleon Boulevard,
Crossways Business Park,
Dartford, Kent, DA2 6QE,
United Kingdom

Email: info@uni-com.co.uk
Web: www.uni-com.co.uk

Authorised Representative

Tucks O'Brien, 24 Magna Drive,
Magna Business Park,
Citywest Road, Dublin 24
D24 FNYO, Ireland

