


PRODUCT OVERVIEW

Door/Window Alarm

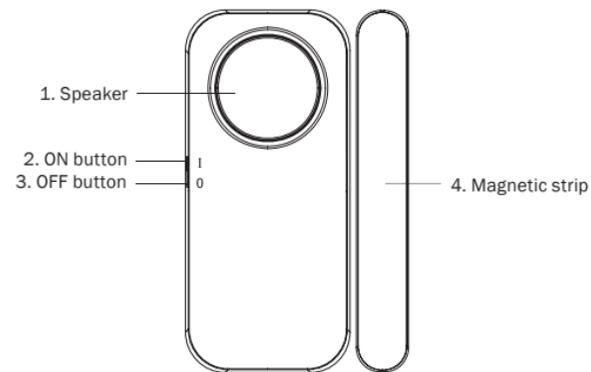

1


INSTALLATION

The Door/Window Alarm comes with the batteries fitted and ready to use.

1. Remove the base plate from both the alarm and the magnetic strip.
2. Using the adhesive tape supplied, mount the alarm base plate on the chosen door or window and the magnetic strip base plate next to the alarm on the door or window frame.
3. Ensure that the arrows on the two backplates are lined up and that the gap between them is no more than 5mm.
N.B. The alarm can be mounted on the door or door frame / window or window frame depending on which fits best. However, always ensure the arrows on the base plates are lined up and the gap with the magnetic strip is no more than 5mm.
4. Refit the alarm and the magnetic strip to the base plates. When the door or window is closed, the alarm and magnetic strip will be next to each other, and when the door or window is opened the alarms and magnetic strip will be separated.
5. The base plates can also be attached using screws (not supplied) through the two holes in each base plate.
6. When changing the batteries in the alarm, simply remove the alarm from the base plate and replace the two CR2032 button cell batteries.

2

BATTERY REPLACEMENT

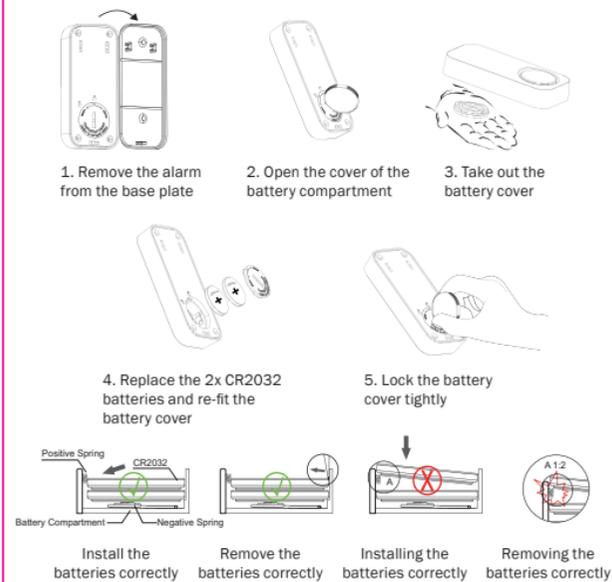


3

PRODUCT INSTRUCTIONS

-
1. Slide the switch to the "I" position
 2. After 30 seconds the alarm will "Beep" to indicate it is now armed.
 3. If the alarm and magnetic strip are now separated by the door or window opening, after 7 seconds the alarm will sound, and continue to sound for 30 seconds, after which it will turn off. The alarm can be switched off anytime by sliding the switch to the "O" position.

4

PRODUCT SPECIFICATION

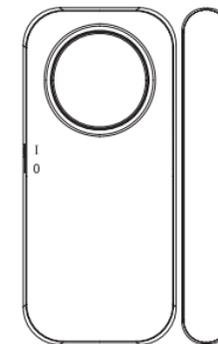

Size: 48x81x18mm
Model: UNC68693
Working Temperature: 0°C~35°C
Decibels: ≥90dB
Working voltage: 2x3V CR2032



5

FAULT ANALYSIS AND SOLUTION

Problem	Possible Cause	Solution
The door/ window alarm does not operate	Battery voltage is not sufficient	Replace the CR2032 batteries
	The installation of the batteries is not correct	Remove and reinsert the CR2032 batteries to ensure good contact
	The switch on the alarm is not switched on	Slide the switch to the "I" position
	The installation of magnetic strip is not correct	Check the arrows on the two base plates are lined up and the distance in between the alarm and magnetic strip is less than 5mm

6

PRODUCT FEATURES

- Loud 90dB alarm
- No wiring required
- Low power consumption

PACKAGE CONTENTS

- 1x door/window alarm
- 1x magnetic strip
- 1x user guide
- 1x double-sided tape for alarm
- 1x double-sided tape for magnetic strip
- 2x CR2032 batteries

7


PRECAUTIONS

Pre-installation notes:

1. Open the package, and consider using double-sided tape or screws to install the alarm.
2. The magnetic strip cannot be installed on a metal door frame or window frame.
3. Please read the warning below when using this product.

Batteries:

The alarm uses 2 x CR2032 button cell batteries. All batteries should be removed prior to disposal. Help the environment by disposing of your products and batteries responsibly.

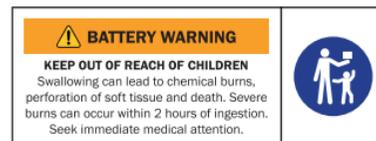

8

UNI-COM

Door/window alarm

Model: UNC68693

Operating Instructions

Uni-Com

Long Reach, Galleon Boulevard,
Crossways Business Park,
Dartford, Kent, DA2 6QE,
United Kingdom

Email: info@uni-com.co.uk
Web: www.uni-com.co.uk

QFF Distribution LTD

24 Magna Drive,
Magna Business Park,
Citywest Road, Dublin 24,
D24 FNYO, Ireland

©2025 Uni-Com. All rights reserved.

9