


## PRODUCT OVERVIEW

### Vibration Alarm

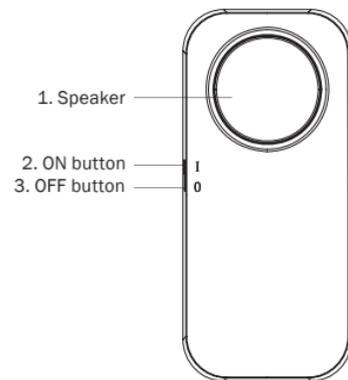

1

## INSTALLATION

The Vibration Alarm comes with the batteries fitted and ready to use.


1. Remove the base plate from the alarm.
2. Using the adhesive tape supplied, mount the alarm base plate on the chosen door, window or glass.
3. Refit the alarm to the base plate.
4. The base plate can also be attached using screws (not supplied) through the two holes in each base plate.
5. When changing the batteries in the alarm, simply remove the alarm from the base plate, open the battery cover using a coin or screwdriver and replace the two CR2032 button cell batteries.

2


## BATTERY REPLACEMENT




1. Open the base plate
2. Open the cover of the battery compartment
3. Take out the battery cover

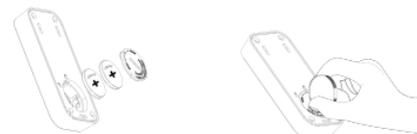

4. Replace the 2x CR2032 batteries and re-fit the battery cover
5. Lock the battery cover tightly

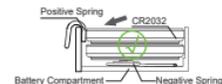


Install the batteries correctly

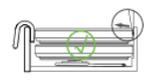

Remove the batteries correctly

3


## PRODUCT INSTRUCTIONS

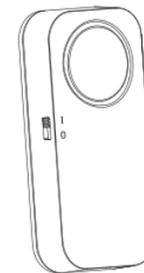

- Arm the alarm by moving the on/off switch to the "I" position. The alarm will now be armed within 30 seconds.
- When the door or window vibrates or the glass is smashed, the alarm will now be triggered.
- To turn off the alarm when triggered, move the on/off switch to the "O" position.
- To disarm the alarm, move the on/off switch to the "O" position. When the alarm is triggered it will sound for 30 seconds.

4

## PRODUCT SPECIFICATION

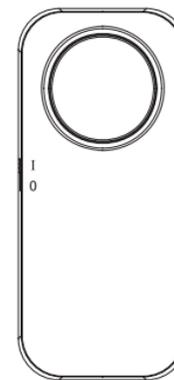

Size: 80.2x37.2x18.6mm  
Model: UNC68709  
Working Temperature: 0°C~35°C  
Decibels: ≥90dB  
Working voltage: 2x3V CR2032



5

## FAULT ANALYSIS AND SOLUTION

Problem	Possible Cause	Solution
The vibration alarm is not working	Battery voltage is not sufficient	Replace the CR2032 batteries
	The installation of the batteries is not correct	Remove and reinsert the CR2032 batteries to ensure good contact
	The alarm is not switched on	Slide the switch to the "I" position

6

## PRODUCT FEATURES

- Loud 90dB alarm
- No wiring required
- Low power consumption

## PACKAGE CONTENTS

- 1x vibration alarm
- 1x user guide
- 1x double-sided tape
- 2x CR2032 batteries

7


## PRECAUTIONS

### Pre-installation notes:

1. Open the package, and consider using double-sided tape or screws to install the alarm.
2. Please read the warning below when using this product.

### Batteries:

The alarm uses 2 x CR2032 button cell batteries. All batteries should be removed prior to disposal. Help the environment by disposing of your products and batteries responsibly.

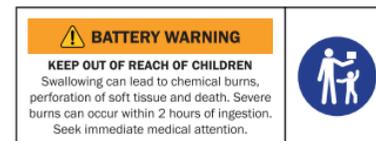

8

**UNI-COM**

## Vibration alarm

Model: UNC68709

## Operating Instructions

### Uni-Com

Long Reach, Galleon Boulevard,  
Crossways Business Park,  
Dartford, Kent, DA2 6QE,  
United Kingdom

Email: [info@uni-com.co.uk](mailto:info@uni-com.co.uk)  
Web: [www.uni-com.co.uk](http://www.uni-com.co.uk)

### QFF Distribution LTD

24 Magna Drive,  
Magna Business Park,  
Citywest Road, Dublin 24,  
D24 FNYO, Ireland

©2025 Uni-Com. All rights reserved.

9