

Head Torch

Model: UNC68754

Operating Instructions

Directions for use

Press the button on the top of the head torch to cycle through the light settings: 100% power 50% power Flashing

The torch body can be tilted by 60 degrees to obtain the required lighting angle.

The head strap is fully adjustable to obtain a comfortable fit.

How to remove/replace the battery

- 1. Release the clip on the top of the head torch to open the battery compartment
- 2. Replace the 3 x AAA batteries, observing the polarity markings.
- 3. Fold the head torch back together until the clip clicks back into place.

Batteries

Off



This product is fitted with 3 x AAA batteries. They should be removed prior to disposal.

Safety warning

Keep out of reach of children. Only use the USB cable supplied. Do not leave unattended while charging. Disconnect when fully charged. Do not shine the light directly into eyes.

Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover the battery or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.

Long Reach, Galleon Boulevard, Crossways Business Park, Dartford, Citywest Road, Dublin 24, Kent, DA2 6QE, United Kingdom

24 Magna Drive, Magna Business Park, D24 FNYO, Ireland



Caution: UV radiation emitted from LEDs.

Do not shine light directly into eyes.

