

# Rechargeable Flood Light

## Model: UNC68815

# **Operating Instructions**

### **Directions for use**

- 1. Press the red button on the back of the flood light to cycle through the three lighting modes - high power, low power, flashing, off
- 2. Battery level indicator (located by the power button). When the flood light is switched on, blue LEDs will illuminate to show the battery level:
  - 4 LEDs = full battery
  - 1 LED = low battery
  - 1 LED flashing = charge the battery immediately

### **Charging other devices**

- 1. Plug the USB "A" plug into the back of the flood light and the USB "C" into the device to be charged, following your devices operating instructions.
- 2. The blue LEDs will illuminate to indicate how much power there is in the flood light battery (4 LEDs full, 1 flashing low power)

# Charging the battery

- 1. Connect the USB cable to the USB "C" socket on the back of the flood light and to a suitable USB charging source (5V DC 2A). Ensure the USB plug is correctly aligned and insert it into the socket gently, do not use excess force.
- 2. The blue LEDs will illuminate with one flashing to show the current battery level. All 4 LEDs will illuminate (not flashing) to show when the battery is fully charged.
- 3. A full charge will take approximately 2.5 hours and provide up to 3.5 hours light on low power.
- 4. Do not leave the battery fully discharged. If the flood light is not going to be used for an extended period of time, fully charge the battery before storage. The battery should then be charged every 3 months to keep the battery in good condition and the flood light ready to use.

### How to remove/replace the battery

- 1. Unscrew the four screws located on the back of the flood light and separate the two parts of the casing.
- 2. Remove the 18650 3.7V 1200mAh Li-ion rechargeable battery by unclipping the battery connector.
- 3. Dispose of old batteries responsibly by taking them to the retailer the product was originally purchased from or your local household waste and recycling site.
- 4. The battery can be replaced with a 18650 3.7V 1200mAh rechargeable battery. Re-connect the battery connector and place the battery in the battery compartment. Refit the two parts of the casing and replace the four screws.

#### **Batteries**



This product is fitted with a 3.7V 1200mAh Li-ion rechargeable battery. It should be removed prior to disposal and can be replaced.

#### Safety warning

Keep out of reach of children. Only use the USB cable supplied. Do not leave unattended while charging. Disconnect when fully charged. Do not shine the light directly into eyes.

Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

#### Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover the battery or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.

#### Uni-Com

Long Reach, Galleon Boulevard, Crossways Business Park, Dartford, Citywest Road, Dublin 24, Kent, DA2 6QE, United Kingdom

# QFF Distribution LTD

24 Magna Drive, Magna Business Park, D24 FNYO, Ireland

Risk group 1 (low risk)

Caution:

UV radiation emitted from LEDs. Do not shine light directly into eyes.

